Class: TN PUBLIC

 $Doc.\ no:\ TERMA/SPD/63/T\text{-}EMU/DEV/$

SERIALCONSOLE

Rev: 1.0

Date: 2015-03-01

Approved by: Michela Alberti



T-EMU: Serial Console Model Manual



Prepared	Checked
Mattias Holm Technical Manager	Dan Søren Nielsen QA Manager
Approved	
Michela Alberti General Manager	

T-EMU: Serial Console Model Manual Doc. no: TERMA/SPD/63/T-EMU/DEV/

SERIALCONSOLE, Rev: 1.0



Record of Changes

Author	Description	Rev	Date
Mattias Holm	Initial Version	1.0	2015-03-01

Table of Contents

1.	Introduction	. 2
2.	Dedicated API	. 2
3.	Creation	2
4.	Configuration	2
	4.1. Properties	
	4.2. Interfaces	
	Limitations	2

1. Introduction

The serial console is a simple endpoint for serial traffic that you can connect a device's UART to. It echos received data to stdout and optionally logs the data in an unbounded log.

2. Dedicated API

There is a dedicated API for accessing the console log. Note that the functions are defined in libTEMUConsole.so.

```
// Include the Console API
#include "temu-c/Models/Console.h"

// These functions are defined in libTEMUConsole.so
uint64_t temu_consoleGetLineCount(void *Con);
const char* temu_consoleGetLine(void *Con, uint64_t Line);
```

3. Creation

The Console class is defined in libTEMUConsole.so. The constructor takes no parameters.

4. Configuration

4.1. Properties

config.caretControl

Will enable handling of caret notation. Handling is primitive and simply omit the caret notation data from stdout. Defaults to on.

PUBLIC

T-EMU: Serial Console Model Manual Doc. no: TERMA/SPD/63/T-EMU/DEV/

SERIALCONSOLE, Rev: 1.0



config.recordTraffic Enable traffic recording, the raw data is recorded

(unaffected by caretControl). Defaults to off.

lastByte Contains the last received byte.

outByte Writing to the outByte property will send the

written byte to the serial object (using the serial interface) the console is connected to. It provides a simple way for scripts to send bytes

to UARTs.

serial Interface property that should be connected to a

UART or serial model.

queue Connect to the EventInterface that will drive the

console's time. Normally the CPU or machine

object.

4.2. Interfaces

SerialIface Connect your UART to this interface.

5. Limitations

- The record buffer cannot be cleaned without deleting the console object.
- Caret control only omits caret sequences from being put on stdout (especially nice when booting Linux). It doesn't act on the sequences in any way at the moment e.g. a delete character will be ignored and not actually delete anything.
- The record buffer will not be checkpointed.